 
## **ATEX Compliant**


## **5 Port Solenoid Valve**


# Series 56-VQC1000



**How to Order Manifold** 

Note) Refer to Serial transmission system on page 30 for the S kit.

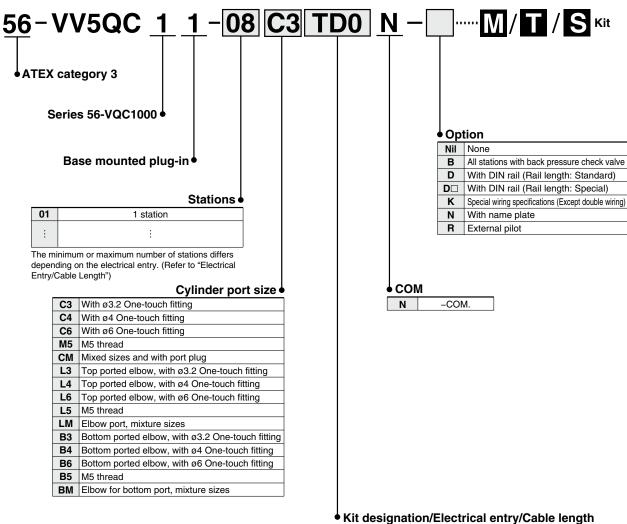

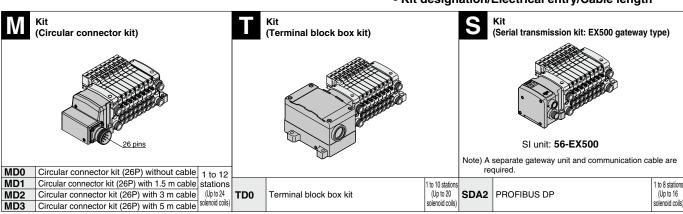

<sup>\*</sup> The maximum number of stations displayed in parentheses is applied to the special wiring specifications. (Option "-K")

The maximum number of stations is determined by the total number of solenoids. (Single solenoid type: 1 point, Double solenoid type: 2 points)

Make sure that the total number of solenoids does not exceed the maximum number of stations. Additionally, when combining with option


parts, make sure that the maximum number of stations is not exceeded.

Contact SMC for 56-EX250 with Profibus DP

All other specifications are the same as the standard products Series VQC. Click here for details.



#### **How to Order Valves**

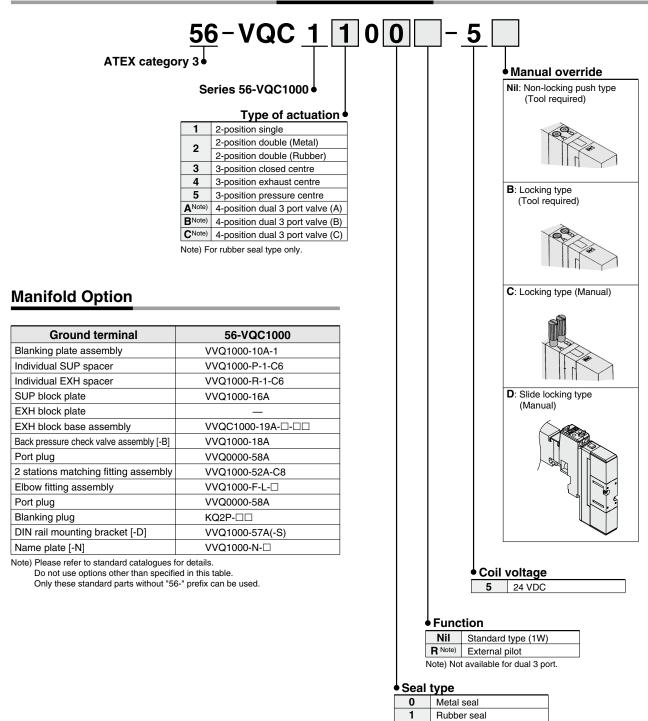

Note) "56-" solenoid valve should be installed in "56-VV5QC11" manifold. Power consumption when starting is 1W, when maintaining 0.35W. "56-VQC" solenoid valve has no polarity"



## **ATEX Compliant**


## **5 Port Solenoid Valve**


## Series 56-VQC2000



#### **How to Order Manifolds**

Note) Refer to Serial transmission system on page 30 for the S kit.

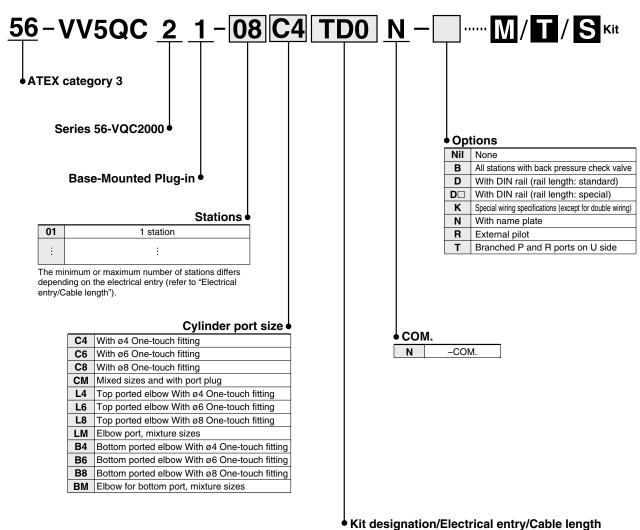

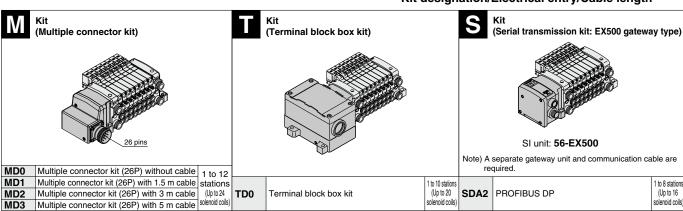

<sup>\*</sup> The maximum number of stations displayed in parentheses is applied to the special wiring specifications. (Option "-K")

The maximum number of stations is determined by the total number of solenoids. (Single solenoid type: 1 point, Double solenoid type: 2 points)

Make sure that the total number of solenoids does not exceed the maximum number of stations. Additionally, when combining with option


parts, make sure that the maximum number of stations is not exceeded.

Contact SMC for 56-EX250 with Profibus DP.

All other specifications are the same as the standard products Series VQC. Click here for details.



#### **How to Order Valves**

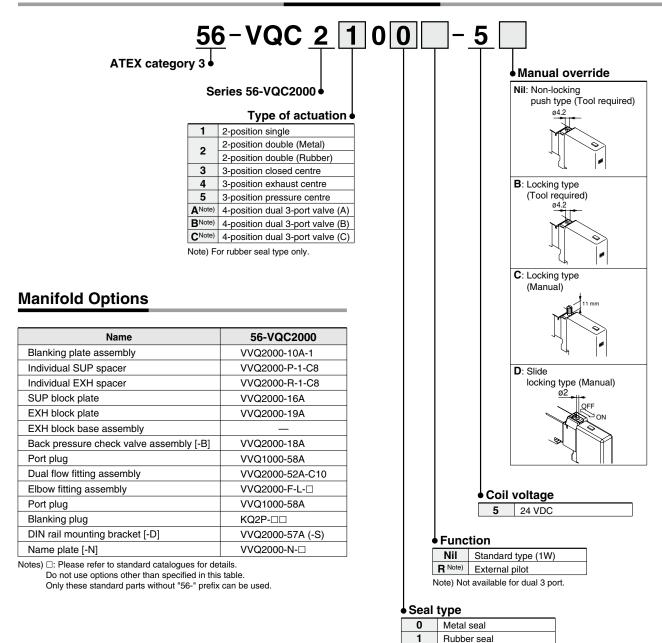


Note) "56-" solenoid valve should be installed in "56-VV5QC21" manifold. Power consumption when starting is 1 W, when maintaining 0.35 W. "56-VQC" solenoid valve has no polarity.

## **ATEX Compliant**

 
## **5 Port Solenoid Valve**






#### **How to Order Manifolds**

Note) Refer to Serial transmission system on page 30 for the S kit.

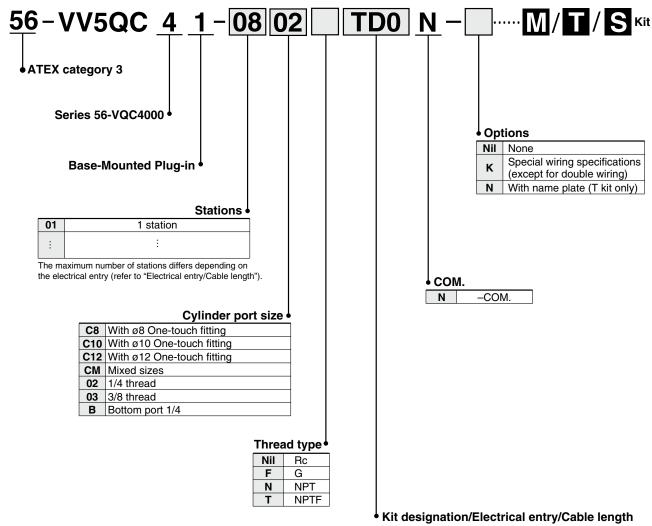

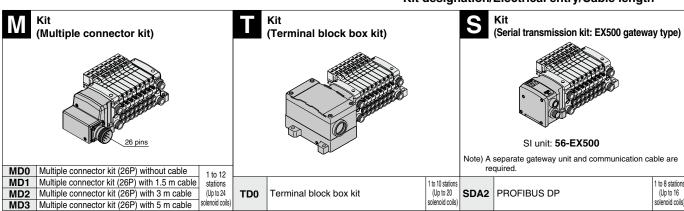

\* The maximum number of stations displayed in parentheses is applied to the special wiring specifications. (Option "-K")

The maximum number of stations is determined by the total number of solenoids. (Single solenoid type: 1 point, Double solenoid type: 2 points)

Make sure that the total number of solenoids does not exceed the maximum number of stations. Additionally, when combining with option


parts, make sure that the maximum number of stations is not exceeded.

Contact SMC for 56-EX250 with Profibus DP.

All other specifications are the same as the standard products Series VQC. Click here for details.



## How to Order Valves

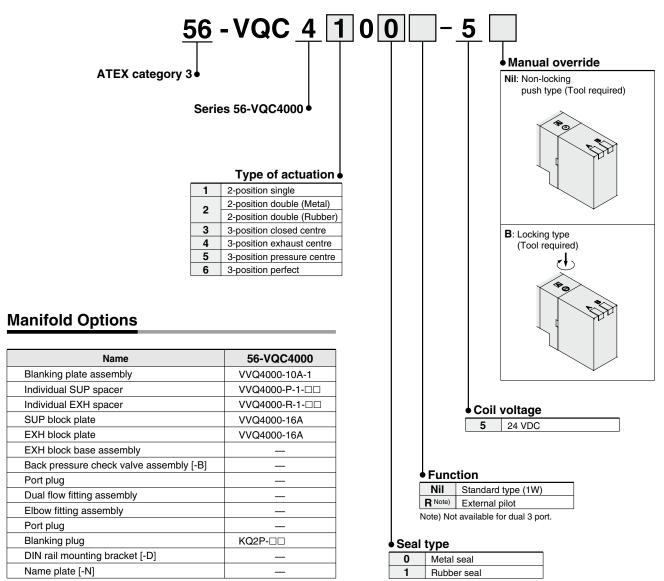

Notes) □: Please refer to standard catalogues for details.

Do not use options other than specified in this table.

Only these standard parts without "56-" prefix can be used.

Note) "56-" solenoid valve should be installed in "56-VV5QC41" manifold. Power consumption when starting is 1 W, when maintaining 0.35 W. "56-VQC" solenoid valve has no polarity.