Transmitters: Relay Valve


RoHS

VR4151/4152 Series

Appropriate output sequences are affected according to the signal received from the mechanical valve. It is equivalent to the auxiliary relay of an electrical system.



Symbol

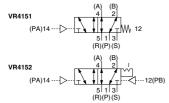

♠ Precautions

- Be sure to read this before handling the products.
- Refer to back page 50 for Safety
- I Instructions and pages 3 to 9 for 3/4/5 I Port Solenoid Valve Precautions.

Environment

Operate the valve in an area in which the vibration does not exceed 5 G. Vibrations could cause the valve to malfunction.

Specifications


| Fluid | | | | Д | ir | | | |
|------------|---|----------------------|-----------------|---------------------|-----------------------|-------|--|--|
| Operating | pressure | е | | 0 to 1. | 0 MPa | | | |
| Pilot pres | sure | | 0.15 to 1.0 MPa | | | | | |
| Ambient a | nd fluid | temperature | −5 t | o 60°C (| No freezi | ng) | | |
| Flow rate | characte | ristics | C[dm3/(s-bar)] | |) | Cv | | |
| | Side | 1(P) ↔2(B)/4(A) | 1.6 | 0. | 15 | 0.38 | | |
| | ported | 2(B)/4(A) ↔3(S)/5(R) | 1.5 | 0 | .2 | 0.36 | | |
| | Bottom | 1(P) ↔2(B)/4(A) | 1.6 | 0 | .2 | 0.38 | | |
| | ported | 2(B)/4(A) ↔3(S)/5(R) | 1.5 | 0. | 25 | 0.36 | | |
| Port size | | | | 1, | /8 | | | |
| Weight | | | Side porte | d | | 350 g | | |
| Weight | | | Bottom port | Bottom ported 300 g | | | | |
| Lubricatio | ubrication Not required (Use turbine oil Class 1 ISO VG32, if I | | | | VG32, if lubricated.) | | | |

Model


| Function | Sub-plate | Model | Indicator |
|---------------|---------------|--------------|-----------|
| | | VR4151-00-0 | _ |
| | W/o sub-plate | VR4151-00-1 | 0 |
| Single pilot | W/ sub-plate | VR4151-01A-0 | _ |
| Sirigle pilot | Side piping | VR4151-01A-1 | 0 |
| | W/ sub-plate | VR4151-01B-0 | _ |
| | Bottom piping | VR4151-01B-1 | 0 |
| | | VR4152-00-0 | _ |
| | W/o sub-plate | VR4152-00-1 | 0 |
| Double pilot | W/ sub-plate | VR4152-01A-0 | _ |
| Double bliot | Side piping | VR4152-01A-1 | 0 |
| | W/ sub-plate | VR4152-01B-0 | _ |
| | Bottom piping | VR4152-01B-1 | 0 |

Construction

VR4151

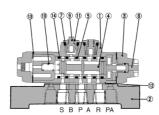

VR4152

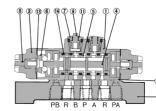

Component Parts

| No. | Description | Material | No. | Description | Material |
|-----|-----------------|-----------------|-----|---------------|-----------------|
| 1 | Valve | ADC | 8 | Manual button | POM |
| 2 | Sub-plate | ZDC | 9 | Piston | POM |
| 3 | Pilot cover | ADC | 10 | Spring | Steel |
| 4 | Spool | Stainless steel | 11 | Spring | Stainless steel |
| 5 | Sleeve | Stainless steel | 12 | Gasket | NBR |
| 6 | Detent assembly | | 13 | Gasket | NBR |
| 7 | Piston cover | Brass | 14 | O-ring | NBR |

VМ


VMG ٧R

VR51


VHK VH

VHS VHS

How to Order

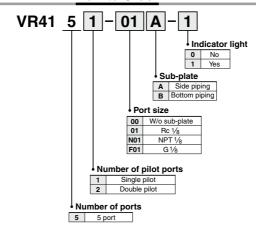

Dimensions

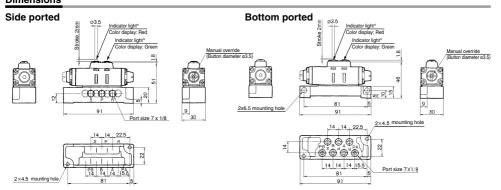

* When "no indicator light" is selected, the plug is attached.

Transmitters: Shuttle Valve

RoHS

VМ

VMG VR

VR51

VHK VH VHS□

VHS

VR1210/1220 Series

Relay valves for controlling the pneumatic signal lines.

This valve is also called "OR valve". As the air is supplied to either IN side, it is output from the OUT side. When the air pressure levels are different, the air with higher pressure flows to the OUT side.






Symbol




Model/Specifications

| Mod | del | VR1210-01 | VR1220-02 |
|-----------------|----------------|--------------|--------------|
| Max. operating | pressure | 1.01 | MPa |
| Min. operating | pressure | 0.05 | MPa |
| Ambient and flu | id temperature | -5 to 60°C (| No freezing) |
| Flow rate | C[dm³/(s·bar)] | 1.3 | 2.9 |
| characteristics | b | 0.2 | 0.2 |
| Port size | | 1/8 | 1/4 |
| Weight | | 24 g | 45 g |

How to Order

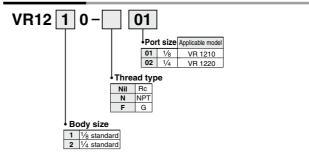


Construction

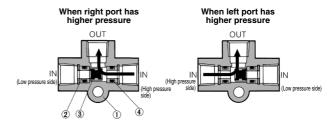

Component Parts

| No. | Description | Material | Note | No. | Description | Material | Note |
|-----|-------------|----------|-----------------|-----|-------------|------------|------|
| 1 | Valve body | ADC | Platinum silver | 3 | Valve | Brass, NBR | |
| 2 | Valve guide | Brass | | 4 | O-ring | NBR | |

Dimensions

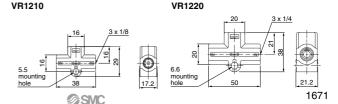

Transmitters:

Shuttle Valve with One-touch Fittings

VR1210F/1220F Series




Relay valves for controlling pneumatic signal lines



Mounting example Holder/TMH series (Click here for details.)

When the difference in input air pressure between two IN sides is 0.05 MPa or more, the air with higher pressure constantly flows to the OUT side.

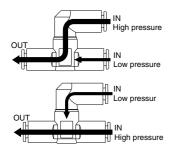



Model

| | Applicable tubing O.D. | | | | | | | | | |
|---------|------------------------|---|-------------|----|----|-----------|-------|------|-------|------|
| Model | | N | /letric siz | ze | | Inch size | | | | |
| | 3.2 | 4 | 6 | 8 | 10 | 1/8" | 5/32" | 1/4" | 5/16" | 3/8" |
| VR1210F | • | • | • | • | | • | • | • | • | |
| VR1220F | | | • | • | • | | | • | • | • |

Specifications

| Proof pressure | 1.5 MPa | | | | | |
|--------------------------------|---------------------------------|--|--|--|--|--|
| Max. operating pressure | 1.0 MPa | | | | | |
| Min. operating pressure | 0.05 MPa | | | | | |
| Ambient and fluid temperature | -5 to 60°C (No freezing) | | | | | |
| Applicable tubing material (1) | Nylon, Soft nylon, Polyurethane | | | | | |

Note 1) Use caution about the maximum operating pressure when soft nylon and polyurethane is used. (Refer to Best Pneumatics No. 7.)


Note 2) Brass components are all electroless nickel plated as standard.

(Copper-free and fluorine-free)

Flow rate characteristics

| | | VR1 | 210F | VR1220F | | | | |
|-----------------|----------------|-------|--------|---------|--------|-------|--------|-------|
| Applicable | Metric size | ø3.2 | ø4 | ø6 | ø8 | ø6 | ø8 | ø10 |
| tubing O.D. | Inch size | ø1/8" | ø5/32" | ø1/4" | ø5/16" | ø1/4" | ø5/16" | ø3/8" |
| Flow rate | C[dm3/(s-bar)] | 0.5 | 0.7 | 1.3 | 1.5 | 1.4 | 2.1 | 3.1 |
| characteristics | b | 0.25 | 0.25 | 0.25 | 0.25 | 0.25 | 0.25 | 0.25 |

How to Order

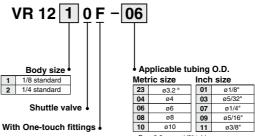

* For ø3.2, use ø1/8" tubing

Transmitters: VR1210F/1220F Series


Example of Operating Circuit

OR circuit

 If either A or B is turned ON, cylinder is actuated.


Self-hold circuit

- 1. If A is turned ON, the output turns ON.
- 2. Even though A is turned OFF, the output remains in ON state.
- 3. If B is turned ON in 2. state, the output is turned OFF.




Interlock circuit

- When either A or B is turned ON, even though C turns ON, the output 3 will not be turned ON.
- Only when both A and B are in OFF state, if C turns ON, the output 3 is turned ON.

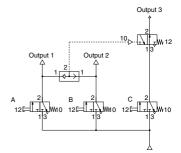

Dimensions

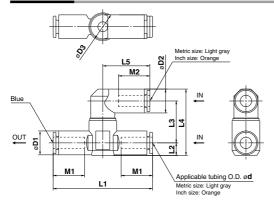

Metric Size

| 11101110 0120 | | | | | | | | | | | | | |
|---------------|-----|------|------|------|------|-----|------|------|------|------|------|------------|-------------------------|
| Model | d | D1 | D2 | D3 | L1 | L2 | L3 | L4 | L5 | M1 | M2 | Weight (g) | Compatible holder Note) |
| VR1210F-23 | 3.2 | 11.4 | 8.4 | | 52 | 6.2 | 19.4 | 29.8 | 17.5 | 12.7 | 12.9 | 21.4 | TMH-06J |
| VR1210F-04 | 4 | 11 | 10.4 | 14.8 | 53 | 6 | 20.3 | 31.5 | 21.9 | 16.5 | 15.8 | 15.6 | _ |
| VR1210F-06 | 6 | 12.8 | 12.8 | 14.8 | 53.2 | 6.7 | 22.5 | 35.6 | 25.2 | 16.8 | 16.8 | 23.0 | TMH-06 |
| VR1210F-08 | 8 | 15.2 | 15.2 | | 60.4 | 8 | | 38.2 | 28.2 | 18.7 | 18.7 | 24.0 | TMH-08 |
| VR1220F-06 | 6 | 12.8 | 12.8 | | 59 | 7.4 | 23.9 | 37.7 | 25.2 | 16.8 | 16.8 | 27.2 | TMH-06 |
| VR1220F-08 | 8 | 15.2 | 15.2 | 19.8 | 65 | 8.2 | 23.9 | 39.7 | 28.2 | 18.7 | 18.7 | 31.9 | TMH-08 |
| VR1220F-10 | 10 | 18.5 | 18.5 | | 71.6 | 9.8 | 25.8 | 44.8 | 31 | 20.8 | 20.8 | 43.2 | TMH-10 |

| Inch Size | | | | | | | | | | | | | |
|------------|-------|------|------|------|------|-----|------|------|------|------|------|------------|-------------------------|
| Model | d | D1 | D2 | D3 | L1 | L2 | L3 | L4 | L5 | M1 | M2 | Weight (g) | Compatible holder Note) |
| VR1210F-01 | 1/8" | 11.4 | 8.4 | | 52 | 6.2 | 19.4 | 29.8 | 17.5 | 12.7 | 12.9 | 21.4 | TMH-06J |
| VR1210F-03 | 5/32" | 11 | 10.4 | 14.8 | 53 | 6 | 20.3 | 31.5 | 21.9 | 16.5 | 15.8 | 15.6 | _ |
| VR1210F-07 | 1/4" | 13.2 | 13.2 | 14.8 | 54.4 | 7 | 22.5 | 36.2 | 25.6 | 16.8 | 16.8 | 23.5 | TMH-07 |
| VR1210F-09 | 5/16" | 15.2 | 15.2 |] | 60.4 | 8 | 22.5 | 38.2 | 28.2 | 18.7 | 18.7 | 24.0 | TMH-09 |
| VR1220F-07 | 1/4" | 13.2 | 13.2 | | 59 | 7.4 | 23.9 | 37.9 | 25.6 | 16.8 | 16.8 | 31.4 | TMH-07 |
| VR1220F-09 | 5/16" | 15.2 | 15.2 | 19.8 | 65 | 8.2 | 23.9 | 39.7 | 28.2 | 18.7 | 18.7 | 31.9 | TMH-09 |
| VR1220F-11 | 3/8" | 17.9 | 18.5 |] | 69.8 | 9.4 | 25.8 | 44.5 | 31 | 20.8 | 20.8 | 53.0 | |

Note) It is possible to use a TMH series holder to secure the VR12. The compatible models and holder models are shown above.



VM

VMG VR

VR51 VHK

VH

VHS

VHS

Transmitters: AND Valve with One-touch Fittings

VR1211F Series




Relay valves for controlling pneumatic signal lines



Mounting example Holder/TMH series (Click here for details.)

Only when air is supplied to both P₁ and P₂ does air flow to the OUT side.

When air pressure differs, pressure in the lower amount flows to the OUT side.



If air is supplied only to either P1 or P2, it does not flow to the OUT side.

Note) Air may flow to the OUT side for a moment until the valve switches. (About 1/100 second) If there is any effect on the connected equipment due to the above air flow, install a speed controller, etc. on the OUT side, and adjust to prevent this effect before use.





Model

| | Applicable tubing O.D. | | | | | | | | | |
|---------|------------------------|-------------|---|-----------|-------|------|--|--|--|--|
| Model | | Metric size | | Inch size | | | | | | |
| | 3.2 | 4 | 6 | 1/8" | 5/32" | 1/4" | | | | |
| VR1211F | • | • | • | • | • | • | | | | |

Specifications

| Proof pressure | 1.5 MPa |
|---|---------------------------------|
| Max. operating pressure | 1.0 MPa |
| Min. operating pressure | 0.05 MPa |
| Ambient temperature and operating fluid temperature | -5 to 60°C (No freezing) |
| Applicable tubing material (1) | Nylon, Soft nylon, Polyurethane |

Note 1) Use caution about the maximum operating pressure when soft nylon and polyurethane is used. (Refer to Best Pneumatics No. 7.)


Note 2) Brass components are all electroless nickel plated as standard

(Copper-free and fluorine-free)

Flow rate characteristics


| | | VR1211F | | | | |
|-----------------|----------------|---------|--------|------|-------|--|
| Applicable | Metric size | ø3.2 | ø4 | ø6 | - | |
| tubing O.D. | Inch size | ø1/8" | ø5/32" | - | ø1/4" | |
| Flow rate | C[dm3/(s-bar)] | 0.3 | 0.4 | 0.5 | 0.6 | |
| characteristics | b | 0.25 | 0.25 | 0.25 | 0.25 | |

How to Order

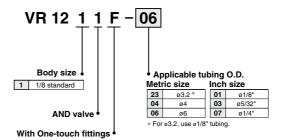


Transmitters: VR1211F Series

Example of Operating Circuit

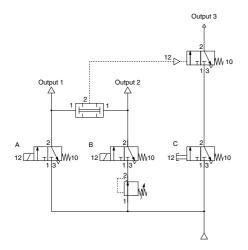

- If both A and B are turned ON, which are in different pressure conditions, both output 1 and 2 will turn ON
- Only when output 1 and 2 are in the ON state, and C turns ON, will output 3 turn ON.
- If either A or B is turned OFF, output 3 will not be turned ON, even if C is turned ON.

Dimensions

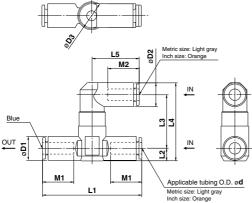

Metric Size

| Model | d | D1 | D2 | D3 | L1 | L2 | L3 | L4 | L5 | M1 | M2 | Weight (g) | Compatible holder Note) |
|------------|-----|------|------|------|------|-----|------|------|------|------|------|------------|-------------------------|
| VR1211F-23 | 3.2 | 11.4 | 8.4 | | 52 | 6.2 | 25.7 | 36.1 | 17.5 | 12.7 | 12.9 | 26.4 | TMH-06J |
| VR1211F-04 | 4 | 11 | 10.4 | 14.8 | 53 | 6 | 26.6 | 37.8 | 21.9 | 16.5 | 15.8 | 20.8 | _ |
| VR1211F-06 | 6 | 12.8 | 12.8 | | 53.2 | 6.7 | 28.8 | 41.9 | 25.2 | 16.8 | 16.8 | 25.0 | TMH-06 |

| Inch Size | | | | | | | | | | | | | |
|-------------------------|--|------|------|------|------|-----|------|------|------|------|------|------------|-------------------------|
| Model | d | D1 | D2 | D3 | L1 | L2 | L3 | L4 | L5 | M1 | M2 | Weight (g) | Compatible holder Note) |
| VR1211F-01 | 1/8" | 11.4 | 8.4 | | 52 | 6.2 | 25.7 | 36.1 | 17.5 | 12.7 | 12.9 | 26.4 | TMH-06J |
| VR1211F-03 | 5/32" | 11 | 10.4 | 14.8 | 53 | 6 | 26.6 | 37.8 | 21.9 | 16.5 | 15.8 | 20.8 | _ |
| VR1211F-07 | 1/4" | 13.2 | 13.2 | | 54.4 | 7 | 28.8 | 42.5 | 25.6 | 16.8 | 16.8 | 27.0 | TMH-07 |
| Note) It is possible to | Note) It is possible to use a TMH series holder to secure the VR12. The compatible models and holder models are shown above. | | | | | | | | | | | | |

VA 12. The compatible models and holder models are shown above.



VM

VMG

VR

VR51

VH

VHS□


VHS

Transmitters: Time Delay Valve


VR2110 Series



Combination of adjustable orifice and fixed flow allows transmission of a pneumatic signal after a fixed time period.

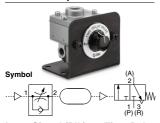


Input Signal (PIL) vs. Time Delay

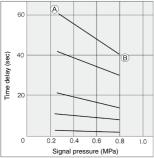

Example) (A) is the point, which is set by the input signal pressure 0.25 MPa, with a delay time of 60 sec. With the same status, if the input signal pressure is increased to 0.8 MPa, the delay time varies to the ® point

Piping Length vs. Release Time

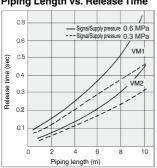


If the input signal (PIL) is turned OFF, the release time of the time delay valve changes depending upon the effective area of the valve and the length of piping. Please refer to the above graph for the standard values.

Model/Specifications

| M | odel | VR2110-01 |
|---------------------|----------------|-----------------------------------|
| Fluid | | Air |
| Supply pressure | | 0 to 1.0 MPa |
| Signal pressure | | 0.25 to 0.8 MPa |
| Time delay | | 0.5 to 60 s |
| Repeatability* | | ±10% F.S. (Representative valve) |
| Operating and fluid | l temperature | -5 to 60°C (No freezing) |
| Flow rate | C[dm³/(s·bar)] | 0.6 [1(P)→2(A)], 0.5 [2(A)→3(R)] |
| characteristics | b | 0.2 [1(P)→2(A)], 0.15 [2(A)→3(R)] |
| Port size | | 1/8 |
| Weight | | 480 g |

- *) The dispersion is shown excluding the first actuation when actuated 4 times continuously.
- *) The accuracy may differ from the values above due to the actual conditions, such as pressure fluctuations, temperature changes, operation intervals, changes over time, etc., so be sure to check the actual machine.


Construction

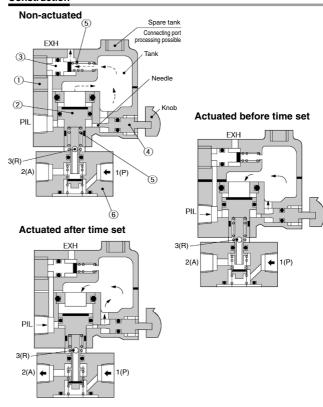


Component Parts

| No. | Description | Material | Note | No. | Description | Material | Note | |
|-----|---------------------|------------|-----------------|-----|------------------|-----------|-------------------------------------|--|
| 1 | Valve body | ADC | Platinum silver | 5 | Return spring | Steel | | |
| 2 | Differential piston | Brass, NBR | | | Mandandard | | | |
| 3 | Exhaust piston | Brass, NBR | | 6 | Mechanical valve | Body: ZDC | VM130- 01-00A (Body color: White) | |
| 4 | Needle | Brass | | | vaive | | (Dody Color, Willie) | |

How to Order



Dimensions

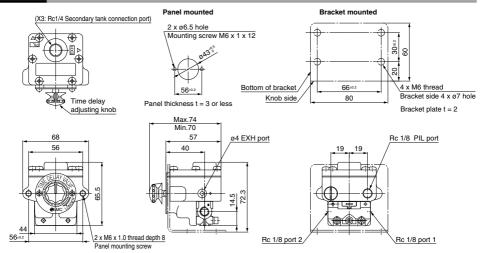

For safety instructions, be sure to read back page 50 or the operation manual before using the product.

Pneumatic Pressure

1. Use regulated air using a regulator for input signal air.

When the input signal air fluctuates, there will be larger differences in the delayed time, making it impossible to obtain the intended functions. Make sure to regulate the air using a regulator to avoid any influence of pressure fluctuation due to air consumption of other equipment.

Operation

⚠ Warning

 The time delay adjusting knob should be operated by hand only. Do not over tighten the knob.

If operating the knob with pliers or a tool or when the knob is over tightened, the needle at the adjusting part may be damaged causing an operation failure.

The knob should be operated by hand only. Do not tighten the knob further than the fully closed position of the needle (the position at which the needle stops rotating when it is tightened gently by hand).

Do not turn off the input signal pressure (PIL) before reaching the delay time. When the input signal pressure (PIL) is turned off before reaching the delay time, air flows out momentarily (about 1/10 seconds) to the outlet side, which may cause devices and components on the outlet side to operate unintentionally.

Operation

 Differences in the delayed time may be larger due to adhesion of the seal when the product is operated for the first time following an extended period of non-operation.


When the product is operated after an extended period of non-operation, the tolerance for the accuracy of repeatability for the time delay may be outside of the ±10 % range. To eliminate this issue, run the time delay valve a number of cycles prior to operation.

Maintenance

⚠ Warning

- Perform inspection on a regular basis as necessary, such as at the beginning of operation, to verify that the time delay valve operates properly.
- Check whether the bolts on the mounting surface or the VR21 body are loose or damaged.

If the bolts are loose, refer to the drawing below and use a hexagon wrench or a Phillips head screwdriver to tighten them.



VM VMG

VIII

VR51

VHK

VH

VHS□

VHS

Transmitters: Pneumatic-electric Relay VR3200/3201/3202 Series

Pneumatic-electric relay converts pneumatic signal to electric relay.



Symbol



↑ Precautions

- Be sure to read this before handling the products.
- Refer to back page 50 for Safety
- Instructions and pages 3 to 9 for 3/4/5 I Port Solenoid Valve Precautions.

Piping

When connecting a pipe fitting to the IN port, place the wrench over the hexagon portion of the lid.

If the wrench is placed over the microswitch body, the neck of the microswitch could break.

Operation

 When the air is in a continually supplied state for long periods of time, the recovery time may be delayed due to the adherence of the seal.

Use caution when supplying air continually for long periods of time.

Model/Specifications


| noaci, opcomoations | | | | | |
|-------------------------------|---------------------|--|--|--|--|
| Model | VR3200-□01 | VR3201-□01 | VR3202-□01 | | |
| Construction | Open type | Splashproof (IP44 equivalent) Conduit: G1/2 | Splashproof/Conduit with ground terminal: Pg13.5 | | |
| Weight | 130 g | 260 g | 260 g | | |
| Operating pressure | 0.1 to 1.0 MPa | | | | |
| Ambient and fluid temperature | - | 5 to 60°C (No freezing | g) | | |
| Contacts | 1ab | | | | |
| Port size | 1/8 | | | | |
| Standard | — EN60947-5-1: 2017 | | | | |

Note) Voltage is up to 30 VDC. Voltage other than that will be inapplicable.


Microswitch Rating

| | N | Non-inductive load (A) | | | | Inductive load (A) | | | |
|---------|----------|------------------------|-------|------|-----------|--------------------|------------|------------|--|
| Voltage | Resistar | nce load | Light | load | Induction | e load | Electric n | notor load | |
| | N.C. | N.O. | N.C. | N.O. | N.C. | N.O. | N.C. | N.O. | |
| 125 VAC | 15 | 15 | 3 | 1.5 | 15 | 15 | 5 | 2.5 | |
| 250 VAC | 15 | 15 | 2.5 | 1.25 | 15 | 15 | 3 | 1.5 | |
| 8 VDC | 15 | 15 | 3 | 1.5 | 15 | 15 | 5 | 2.5 | |
| 14 VDC | 15 | 15 | 3 | 1.5 | 10 | 10 | 5 | 2.5 | |
| 30 VDC | 6 | 6 | 3 | 1.5 | 5 | 5 | 5 | 2.5 | |
| 125 VDC | 0.5 | 0.5 | 0.5 | 0.5 | 0.05 | 0.05 | 0.05 | 0.05 | |
| 250 VDC | 0.25 | 0.25 | 0.25 | 0.25 | 0.03 | 0.03 | 0.03 | 0.03 | |

How to Order

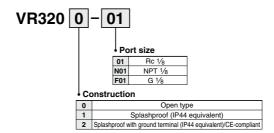

Construction



Component Parts


| No. | Description | Material | Note | 1 |
|-----|-------------|----------|------|---|
| 1 | Body | Brass | | |
| 2 | Сар | Brass | | |
| 3 | Piston | POM | | Ξ |

| | No. | Description | Material | Note |
|---|-----|-------------|-----------------|---------------|
| | 4 | Spring | Stainless steel | |
| | 5 | Microswitch | | Contacts 1 ab |
| _ | | | | |


Transmitters: **VR3200/3201/3202 Series**


Dimensions

VR3200

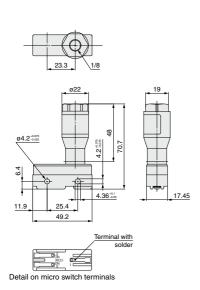

VR3201, VR3202

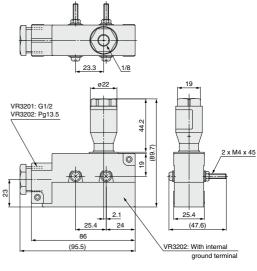

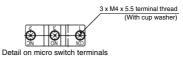

VM

VMG

VR VR51

VHK

VH

VHS.

Transmitters: Pneumatic Indicator VR3100 Series



Transmitters: Miniature Pneumatic Indicator VR3110 Series



Indicates the presence of pneumatic pressure. It is equivalent to the pilot lamp of an electrical system.





This is an ultra-compact air indicator light to monitor the presence of air pressure.

It is equivalent to the pilot lamp of an electrical system.





Model/Specifications


| model, opcom | outions | | | | |
|-------------------------|--------------------------|--------------------------|--------|--|--|
| Model | VR3100-01R | VR3100-01R VR3100-01G VR | | | |
| Color of indicator | Red | Green | Orange | | |
| Operating pressure | 0.1 to 0.8 MPa | | | | |
| Ambient and fluid temp. | -5 to 60°C (No freezing) | | | | |
| Frequency | | 100 c.p.m. or less | 3 | | |
| Port size | Rc1/8 | | | | |
| Weight | | 40g | | | |

Use caution when supplying air continually for long periods of time.

Model/Specifications


| Model | VR3100-01R | VR3100-01G | VR3100-010 | Model | VR3110-01R | VR3110-0 | | |
|--|--------------------------|------------|-------------------------|--------------------------|------------|----------|--|--|
| Color of indicator | Red | Green | Orange | Color of indicator | Red | Green | | |
| Operating pressure | 0.1 to 0.8 MPa | | Operating pressure | 0.15 to 1.0 MPa | | | | |
| Ambient and fluid temp. | -5 to 60°C (No freezing) | | Ambient and fluid temp. | −5 to 60°C (No freezing) | | | | |
| Frequency | 100 c.p.m. or less | | Frequency | 300 c.p.m. or less | | | | |
| Port size | Rc1/8 | | | Port size | R 1/8 | | | |
| Weight | 40g | | Weight | 6g | | | | |
| When the air is in a continually supplied state for long periods of time, the recovery time may be delayed due to the adherence of the seal. | | | | | | | | |

Construction



| No. | Description | Material | Note |
|-----|------------------|-----------------|------|
| 1 | Body | Aluminum alloy | |
| 2 | Indicator window | Acrylic | |
| 3 | Piston | POM | |
| 4 | Return spring | Stainless steel | |
| 5 | DY seal | NBR | |

Construction



Piston (Red, green)

| No. | Description | Material | Note |
|-----|-------------|-----------------|------|
| 1 | Body | Brass | |
| 2 | Piston A | POM | |
| 3 | Plug | PE | |
| 4 | Spring | Stainless steel | |
| 5 | O-rina | NBR | |

Dimensions

Panel mounting Max. 9 65.5 (17.5) Rc1/8 020 M22×1 Panel

Dimensions

