Line Filter

FH34/44/54/64 Series

Rated Pressure: 3.5, 7, 14, 21 MPa RoHS



Compact, solid, and safe design

The case and cover have undergone testing in which they were subjected 100,000 times to impacts equivalent 1.5 times the rated pressure (confirming to MIL standard).

Easy element replacement

The element is extracted from the top, and secured in place by inserting an O-ring seal. The element can be installed and removed easily, simplifying maintenance.

Reliable outlet side

A firm seal is secured through a special configuration combining a pressure clamp from an O-ring around the inner perimeter of the case with support from the cover, and there is no resistance when the cover is installed and removed

Large drain exhaust port

The large M24 drain exhaust port assures rapid drainage.

Easy fluid flow direction reversal

Simply turn the cover 180° relative to the case mounting base to reverse the fluid flow direction.

Clogging sensor

The filter can be mounted with a differential pressure indicator (reset type) or differential pressure indication switch (common with visual, non-reset type).



Specifications

Fluid		Hydraulic fluid				
Operating pre	essure	Max. 3.5 MPa	Max. 7, 14, 21 MPa			
Operating ten	nperature	Max. 80°C				
Main material	Cover/Case Note 1)	Aluminum die-cast (3/8, 1/2, 3/4, 1)	Cast iron			
	Cover/Case No. 17	Aluminum casted (1 1/4, 1 1/2, 2)	Cast iron			
	O-ring	NBR or FKM Note 2)				
	Material	Paper				
Element	Nominal filtration	5, 10, 20 μm				
	Differential pressure resistance	0.6 MPa				
Differential pressure indicator opera	ating pressure (Element replacement differential pressure)	0.275 MPa				
Relief valve o	pen pressure	0.35 MPa				

Note 1) There may be scratches, discoloration, slight paint peeling, or other defects which do not affect the product's function or performance.

Note 2) The material of the O-rings and seals differs depending on the hydraulic fluid used. Petroleum, Water-glycol, Emulsion: NBR; Phosphoric ester: FKM

Model/Rated Flow Rate

Operating	Mo	del	Po	Rated flow rate	
pressure	Threaded connection	Flange connection	Threaded Rc	Flange SSA	(L/min)
	FH340-03	_	3/8	_	10
	FH340-04	_	1/2	_	20
Мах.	FH342-06	_	3/4	20 (3/4 ^B)	50
3.5	FH342-08	_	1	25 (1 ^B)	80
MPa	FH340-10	FH341-10	1 1/4	32 (1 1/4 ^B)	120
	FH340-12	FH341-12	1 1/2	40 (1 1/2 ^B)	160
	_	FH341-16	_	50 (2 ^B)	260
	FH440-03	_	3/8	_	10
	FH440-04	FH441-04	1/2	15 (1/2 ^B)	20
	FH440-06	FH441-06	3/4	20 (3/4 ^B)	50
Мах.	FH440-08	FH441-08	1	25 (1 ^B)	80
7	FH440-10	FH441-10	1 1/4	32 (1 1/4 ^B)	120
MPa	FH440-12	FH441-12	1 1/2	40 (1 1/2 ^B)	160
	_	FH441-16	-	50 (2 ^B)	260
	_	FH441-20	_	65 (2 1/2 ^B)	450
	_	FH441-24	_	80 (3 ^B)	600

Operating	Mo	del	Po	Rated	
pressure	Threaded connection	Flange connection	Threaded Rc	Flange SSA	flow rate (L/min
	FH540-03	-	3/8	_	10
	FH540-04	FH541-04	1/2	15 (1/2 ^B)	20
Max.	FH540-06	FH541-06	3/4	20 (3/4 ^B)	50
14	FH540-08	FH541-08	1	25 (1 ^B)	80
MPa	FH540-10	FH541-10	1 1/4	32 (1 1/4 ^B)	120
	FH540-12	FH541-12	1 1/2	40 (1 1/2 ^B)	160
	_	FH541-16	-	50 (2 ⁸)	260
	FH640-03	_	3/8	_	10
	FH640-04	FH641-04	1/2	15 (1/2 ^B)	20
Мах.	FH640-06	FH641-06	3/4	20 (3/4 ^B)	50
21	FH640-08	FH641-08	1	25 (1 ^B)	80
MPa	FH640-10	FH641-10	1 1/4	32 (1 1/4 ^B)	120
	FH640-12	FH641-12	1 1/2	40 (1 1/2 ^B)	160
	_	FH641-16	_	50 (2B)	260


Note) Tapered female thread connection conforming to JIS B 0203 is compatible.

Flanges conforming to JIS B 2291 (21 MPa piping flanges for hydraulic use) SSA are compatible.

Accessory/Ontion

Accessory/Option			
Description	Part no.	Model	Note
	CB-48H	FH34 ⁹	Petroleum, Water-glycol, Emulsion
	CB-48H-V	FH44º	Phosphoric ester
Differential pressure	CB-52H	FH342	Petroleum, Water-glycol, Emulsion
indicator	CB-52H-V	FR342	Phosphoric ester
	CB-64H	FH54 ⁹	Petroleum, Water-glycol, Emulsion
	CB-64H-V	FH64	Phosphoric ester
	CB-49H	FH34 ⁹	Petroleum, Water-glycol, Emulsion
Di#	CB-49H-V	FH44	Phosphoric ester
Differential pressure indication switch	CB-53H	FH342	Petroleum, Water-glycol, Emulsion
(N.C. and N.O. common)	CB-53H-V	FR342	Phosphoric ester
	CB-65H	FH54 ⁹	Petroleum, Water-glycol, Emulsion
	CB-65H-V	FH64	Phosphoric ester
	AG-9H	FH34 ⁹	Petroleum
D	AG-9H-W	to	Water-glycol, Emulsion
Blanking cap (for differential pressure	AG-9H-V	FH64 ^º	Phosphoric ester
indication part)	AG-12H		Petroleum
. ,	AG-12H-W	FH342	Water-glycol, Emulsion
	AG-12H-V		Phosphoric ester

How to Order

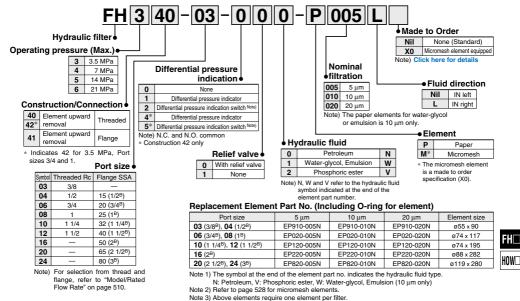

Construction/Seal List

Differential pressure indication switch Differential 10 pressure Hexagon socket indicator head cap screw Blanking cap Cove 3 O-ring ① O-ring OUT IN (4) O-ring Relief valve Flement Differential pressure Case indicator ② O-ring Drain plug

DRAIN


Replacement O-ring/Seal List (One each of the seal and O-ring types listed below are required per filter.)

		types I							
Applicable	Port	Applicable		① O-ring	② O-ring		3 O-ring	4 O-ring	
hydraulic	size	hydraulic	Material	order no.	order no.	Material	order no.	order no	
fluid	SIZC	fluid		(Nominal size)	(Nominal size)		(Nominal size)	(Nominal size	
FH340	03 to 04			KA00617			KA00468	KA0047	
111040	00 10 07			(G80)			(P22A)	(P30)	
FH34□	06 to 08			KA00611			KA00079	KA00082	
гпоч	00 10 00			(G105)	KA00630		(P32)	(P44)	
FH44 to 64	02 to 04			KA00615			KA00074	KA0047	
FT14411 (U U411	03 10 04	Petroleum.		(G65)			(P20)	(P30)	
EUMIT + A SAIT	ne +a ne	Water-glycol,	NBR-90	1/400040		NBR-70-1	KA00079	1/40000	
FT14411 (U U411	00 10 00	Emulsion	NDD-90	KA00618		INDR-7U-1	(P32)	KA0008	
FH34 to 64	101-10	Emulsion			1		KA00803	(P44)	
FU94□ (0 04□	10 10 12			(G90)			(P40)		
FH341 to 641	16			KA00611	(P28)		KA00806	KA00806	
FD341 (0 041	10			(G105)	1		(P50)	(P50)	
FH441	20 to 24			KA00612M	1		KA00809	KA00809	
FП441	20 10 24			(G145)	1		(P85)	(P85)	
FH340	03 to 04			KA01296M			KA00713	KA00104	
FH340	03 10 04			(G80)			(P22A)	(P30)	
FH34□	06 to 08			KA02476	1		KA00720	KA00107	
гп34⊔	00 00 08			(G105)	KA00631M		(P32)	(P44)	
EUMIT to CAT		o 64□ 03 to 04			KA01759	1		KA00102	KA00104
FF1441 (U 0411	03 10 04			(G65)	1		(P20)	(P30)	
FH44 to 64	00 += 00	Phosphoric	FKM-90		1	FKM-70	KA00720		
rn441 to 0411	00 00 08	ester	FKM-90	KA02477		FKM-70	(P32)	KA00107	
FUNCTI ACC	401.40					KA00722			
FH34□ to 64□	10 to 12			(G90)			(P40)	(P44)	
FIINH L. CH	16			KA02476	(P28)		KA00636	KA00636	
FH341 to 641				(G105)	1 ' '		(P50)	(P50)	
FILAM	001-04			KA01760	1		KA00725		
FH441	20 to 24			(G145)	1	l	(P85)	(P85)	

Note) The material and nominal size notations are based on JISB2401.

FH34/44/54/64 Series


Flow Rate Characteristics

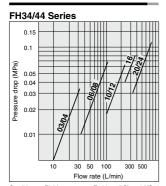

Conditions

Fluid: Turbine oil Class 2 VG56 Measured pressure: 3.5, 7 MPa Viscosity: 45 mm²/s Filter material: Paper Nominal filtration: 10 um


FH54 Series

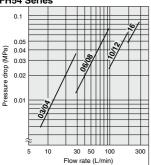

Conditions Fluid:

Turbine oil Class 2 VG56 Measured pr ire: 14 MPa Viscosity: 45 mm²/s Filter material: Paper Nominal filtration: 10 µm

FH64 Series

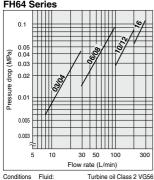

Conditions

Turbine oil Class 2 VG56 Measured pressure: 21 MPa 45 mm²/s


Viscosity: Filter material: Paper Nominal filtration: 10 µm

Differential Pressure Indication

Two indication methods are available: differential pressure indicator and differential pressure indication switch. These can be mounted on all filter models


■ Differential pressure indicator

- Operating pressure-0.275 MPa
- · Once a value is displayed, it will continue to be displayed until reset, even if the pump is stopped. (Reset type)
- Perform element replacement when the red ring floats up and covers the entire view port.



■ Differential pressure indication switch

- Operating pressure—0.275 MPa
- When a value has been displayed, it will be automatically reset when the pump is stopped. (Non-reset type)
- This is a visual dual-purpose. Perform element replacement when the switch has actuated (when the red ring floats up and covers the entire view port).
- N.C. and N.O. common



* Refer to page 529 for "Microswitch for differential pressure indication switch".

Handling Precautions

1 Mounting

 Confirm INLET and OUTLET before mounting. Then connect so that the drain is oriented downward. For maintenance, make sure to provide sufficient space above the filter for removing the element.

2 Operation

- The hydraulic fluid used becomes high viscosity when the temperature is low during the winter, etc., and the differential pressure indicator or the switch may activate. If this occurs, wait until the oil temperature rises by a warm-up operation, then check if this is caused by clogging.
- Once the differential pressure indicator is actuated, the indication continues to be displayed until the indicator is reset (by depressing the reset button), even if the pump stops operating.
 - Reset after replacing the element and restarting operation, or after normal operation starts in cold weather such as during winter.
- When using a differential pressure indication switch and if a filter clogged signal is incorporated into the sequence circuit of the machine, make sure to design the system so the filter clogged signal does not operate until normal operation starts.

③ Element replacement

- When the pressure difference reaches 0.275 MPa during operation (actuating the differential pressure indicator), stop operation, drain the oil from the case, and replace the element.
- · When replacing the element, check the Orings and replace them if they are damaged.
- . When installing and removing an element, do not scratch or damage it by touching the corners of the case, etc.


(4) Others

- For the top cover O-ring, use a product of hardness 90 to prevent leaks or damage.
- If there is back pressure, install a check valve on the outlet side to prevent damage to the element.
- Turn the top cover 180° to reverse the oil flow direction.
- Use an auxiliary pipe or the like and apply force evenly when tightening the hexagon socket head cap screws on the cover and



512

Dimensions

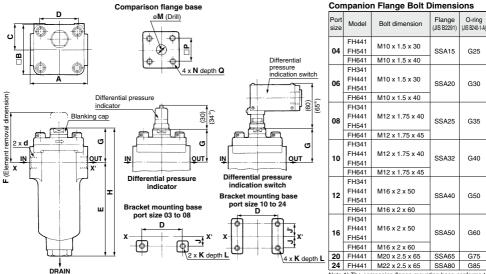

Note 1) The companion flange mounting base conforms to JIS B 2291 (21 MPa pipe flanges for hydraulic use) SSA.

Note 2) This filter does not include any companion flange, companion flange bolt, and O-ring.

(*): Internal dimensions for FH	342 type
---------------------------------	----------

(*). Internal C			type																(mm)						
Model		d Flange SSA	A	В	С	D	E	F	G	н	J	J'	к	L	М	N	Р	Q	Weight (kg)						
FH340-03	3/8	_	105	96	50	80	156	275	57	213	5		2 x M8 x 1.25	10					1.8						
FH340-04	1/2	-	105	90	50	00	130	2/3	57	213	3		2 X IVI8 X 1.25	19					1.0						
FH342-06	3/4	_	136	120	65	60	175	340	61	236	0	_	2 x M10 x 1.5	15					2.5						
FH342-08	1	_	130	120	65	60	1/5	340	01	230	0		2 X WI I U X 1.5	15	_	_			2.5						
FH341-10	1 1/4	32 (1 1/4 ^B)	150	106	56	100	255	435	87	342	50	0	4 x M10 x 1.5	23	32	4 x M12 x 1.75	56	17	4.6						
FH341-12	1 1/2	40 (1 1/2 ^B)	150	100	50	100	255	433	07	342	50	U	4 X WITU X 1.5	23	36	4 x M16 x 2	65	20	4.6						
FH341-16	_	50 (2 ^B)	155	120	70	120	356	545	94	450	60	0	4 x M12 x 1.75	28	46	4 x M16 x 2	73	20	6.4						
FH440-03	3/8	_	100	80	45	60	157	285	62	219	0		2 x M8 x 1.25	14	_	1	_	_	4.5						
FH441-04	1/2	15 (1/2 ^B)	100	80	45	60	157	200	02	219	"		2 X IVIO X 1.25	14	16	4 x M10 x 1.5	36	12	4.5						
FH44 ₁ -06	3/4	20 (3/4 ^B)	135	108	57	80	177	330	73	250	0		2 x M10 x 1.5	18	20	4 x M10 x 1.5	40	12	8.7						
FH441-08	1	25 (1 ^B)	133	106	37	00	1//	330	/3	250	"		2 X WI I U X 1.5	10	25	4 x M12 x 1.75	48	17	0.7						
FH441-10	1 1/4	32 (1 1/4 ^B)	150	105	57	00	255	435	87	342	50	0	4 x M10 x 1.5	18	32	4 x M12 x 1.75	56	17	12.2						
FH44 ₁ -12	1 1/2	40 (1 1/2 ^B)	150	150	150	150	150	150	150	105	5/	80	255	433	01	342	30	U	4 X W 10 X 1.5	18	36	4 x M16 x 2	65	20	12.2
FH441-16	_	50 (2 ^B)	160	120	65	92	354	540	94	448	60	0	4 x M12 x 1.75	22	46	4 x M16 x 2	73	20	18.1						
FH441-20	_	65 (2 1/2 ^B)	000	170	100	130	385	615	119	504	40	25	4 x M12 x 1.75	22	60	4 x M20 x 2.5	92	27	35.9						
FH441-24	_	80 (3 ^B)	220	170	100	130	300	015	119	304	40	23	4 X WI I 2 X 1.75	22	70	4 x M22 x 2.5	103	27	35.9						
FH540-03	3/8	_	405	-00	45	70		005					0 140 4.05		_	_	_	_							
FH54 ₁ -04	1/2	15 (1/2 ^B)	105	86	45	70	147	285	62	209	0		2 x M8 x 1.25 14	14	16	4 x M10 x 1.5	36	12	5.2						
FH541-06	3/4	20 (3/4 ^B)		400		400		000		050			0 1440 4.5		20	4 x M10 x 1.5	40	12							
FH541-08	1	25 (1 ^B)	145	108	56	100	177	330	73	250	0		2 x M10 x 1.5	18	25	4 x M12 x 1.75	48	17	9.7						
FH541-10	1 1/4	32 (1 1/4 ^B)				400	055	405		040					32	4 x M12 x 1.75	56	17							
FH541-12	1 1/2	40 (1 1/2 ^B)	150	108	56	100	255	435	87	342	50	0	4 x M12 x 1.75	22	36	4 x M16 x 2	65	20	12.8						
FH541-16	_	50 (2 ^B)	180	126	70	120	356	545	94	450	60	0	4 x M12 x 1.75	22	46	4 x M16 x 2	73	20	20.4						
FH640-03	3/8	_						005		200					_	_	_	_							
FH64 ₁ -04	1/2	15 (1/2 ^B)	120	98	51	90	147	285	62	209	0	_	2 x M10 x 1.5	18	16	4 x M10 x 1.5	36	22	6.9						
FH641-06	3/4	20 (3/4 ^B)	455	404	0.5	400		200	7.0	٥٥٥	0		0 1440 4 -	40	20	4 x M10 x 1.5	40	22	10.5						
FH64 ⁰ ₁ -08	1	25 (1 ^B)	155	124	65	120	177	330	73	250	0		2 x M10 x 1.5	18	25	4 x M12 x 1.75	48	22	12.9						
FH641-10	1 1/4	32 (1 1/4 ^B)	400	404	0.5	405	055	405		040		_	4 1440 475		32	4 x M12 x 1.75	56	22	40.0						
FH641-12	1 1/2	40 (1 1/2 ^B)	180	124	65	125	255	435	87	342	50	0	4 x M12 x 1.75	22	36	4 x M16 x 2	65	30	19.8						
FH641-16	_	50 (2 ^B)	200	144	75	145	356	545	94	450	60	0	4 x M12 x 1.75	22	46	4 x M16 x 2	73	30	29						

Note) Tapered female thread conforming to JIS B 0203 is compatible.

Flanges conforming to JIS B 2291 (21 MPa pipe flanges for hydraulic use) SSA are compatible.







FH Series

Microswitch for Differential Pressure Indication Switch

(1) Contact specifications

Table 1 Contact specifications

Item	Specifications		
Inrush current	Max. 15 A		
Minimum applicable load	5 VDC 160 mA		

(2) Rating

Table 2 Rating


Rated voltage	Resistance load
250 VAC	5 A

(3) Other performance

Table 3 Other specifications

	Item	Specifications		
Insula	tion resistance	100 M Ω or more (Measured by 500 VDC, insulation resistance tester.)		
Conta	act resistance	30 mΩ or less		
	Between terminals with the same pole.	1,000 VAC 50/60 Hz 1 min		
Withstand	Between charged metal	1,500 VAC 50/60 Hz 1 min		
	part and ground	1,500 VAC 50/60 HZ 1 IIIIII		
voltage	Between each terminal and	4 500 3/40 50/00 11- 4		
	non-charged metal part	1,500 VAC 50/60 Hz 1 min		

(4) Electric circuit



(N.C. and N.O. common)

Precautions

- Connect desired wiring to the micro switch indication symbols 1 (COM.), 2 (N.C.), and 3 (N.O.).
- When a protection mechanism is required, take appropriate considerations on the electric circuit since the micro switch is a type of non-reset.

(5) Terminal type

Soldering terminal



