
Direct Operated Precision Regulator


ARP20/30/40 Series

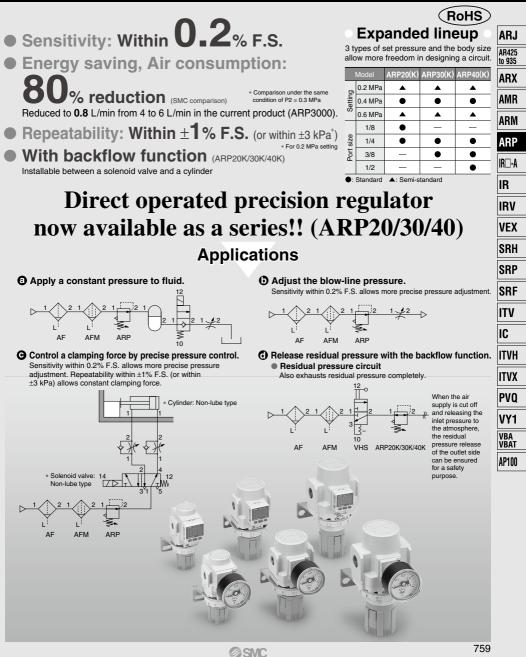

Direct Operated Precision Regulator/Modular Type **ARP20 to ARP40 Series**

Direct Operated Precision Regulator with Backflow Function/Modular Type

ARP20K to ARP40K Series

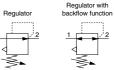

Symbol

RoHS


• With the backflow function it incorporates a mechanism to exhaust the air pressure in the outlet side reliably and quickly.

Example 1) When the pressure in the rear and the front of the cylinder differs:		Example 2) When the air supply is cut off and releasing the inlet pressure to the atmosphere, the residual pressure release of the outlet side can be ensured for a safety purpose.	$ \searrow 12^{\circ} 10^{\circ} 12^{\circ} 12^{$	
	When the pressure in the rear and	When the pressure in the rear and the front of the cylinder differs: $14\frac{2}{\frac{1}{2}\sqrt{\frac{1}{2}\sqrt{\frac{1}{2}}}}$	When the pressure in the rear and the front of the cylinder differs: 14 21 14 14 21	When the pressure in the rear and the front of the cylinder differs: $14\frac{2}{14}$ When the air supply is cut off and releasing the inlet pressure to the atmosphere, the residual pressure release of the outlet side can be ensured for a safety purpose. 10

How to Order

A	R	Ρ		< - 2 8	• Option / Semi-standard: Se • Option / Semi-standard syn Example) ARP30K-03BE-1R	bol: Enter them		<i>I.</i>
\langle	/						0	
			<u> </u>	Symbol	Description		Body size	
					20	30	40	
6		With	backflow	Nil	Without backflow function		•	
0		fu	unction	K	With backflow function	•	٠	•
				+				
	Nil Rc					•	•	
6	3 Thread type		N	NPT	•	•		
	F			F	G	•	•	•
				+				
	0		01	1/8	•	—	—	
4		P	ort size	02	1/4	•	۲	•
•			011 3120	03	3/8	—	۲	
				04	1/2			•
_	_	_		+				
				Nil	Without mounting option	•	•	•
		а	Mounting	B Note 2)	With bracket	•	•	•
				н	With set nut (For panel mount)	•	•	
	Note 1)			+				
	ч		Pressure	Nil	Without pressure gauge	•	•	
6	Option	gauge	E	Square embedded type pressure gauge (With limit indicator)	•	<u> </u>	•	
			G	Round type pressure gauge (With limit indicator)	•	•		
		b	Digital	E1 Note 3)	Output: NPN output / Electrical entry: Wiring bottom entry	•	•	•
			pressure	E2 Note 3)	Output: NPN output / Electrical entry: Wiring top entry	•	•	•
			switch	E3 Note 3)	Output: PNP output / Electrical entry: Wiring bottom entry	•	•	•
				E4 Note 3)	Output: PNP output / Electrical entry: Wiring top entry	•	•	

Direct Operated Precision Regulator/Modular Type ARP20 to ARP40 Series Direct Operated Precision Regulator with Backflow Function/Modular Type ARP20K to ARP40K Series

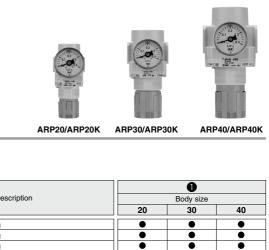

		~					•		
				Symbol	Description		Body size		VE
						20	30	40] =
				Nil	0.005 to 0.4 MPa setting		•		SR
		с	Set pressure	1 Note 4)	0.005 to 0.2 MPa setting	•	•	•	
				3 Note 4)	0.008 to 0.6 MPa setting	•	•	•	SF
				+					
	2	d	Flow direction	Nil	Flow direction: Left to right	•	•	•	SF
	ndard	u	Flow direction	R	Flow direction: Right to left		•	•	
6				+					' IT\
	Semi-	е	Knob	Nil	Downward facing knob		•	•	
	s	e	KIIOD	Y	Upward facing knob	•	•	•	IC IC
				+					
				Nil	Name plate and pressure gauge in imperial units: MPa	•	•	•] IT\
		f	Pressure unit	Z Note 5)	Name plate and pressure gauge in imperial units: psi	O Note 7)	O Note 7)	O Note 7)	
				ZA Note 6)	Digital pressure switch: With unit conversion function	△ Note 8)	△ Note 8)	△ Note 8)	IT\

Note 1) Options B, G, H are shipped together, (but not assembled).

Note 2) Set nut is included for bracket.

Note 3 When choosing with H (panel mount), the installation space for lead wires will not be secured. In this case, eslect "wiring top entry" for the lead wire entry. (Select "wiring bottom entry" when the semi-standard Y is chosen simultaneously.)

Note 4) The only difference from the standard specifications is the pressure regulator spring.

It does not restrict the setting of 0.2 MPa/0.6 MPa or more

When the pressure gauge is attached, a 0.2 MPa pressure gauge for 0.2 MPa setting will be fitted, and a 0.7 MPa pressure gauge for 0.6 MPa setting will be fitted.

When a digital pressure switch is attached, the pressure display is fixed to 1.0 $\ensuremath{\mathsf{MPa}}$.

Note 5) For thread type: NPT. This product is for overseas use only according to the new Measurement Law. (The SI unit type is provided for use in Japan.) The digital pressure switch will be equipped with the unit conversion function, setting to psi initially.

Note 6) For options: E1, E2, E3, E4. This product is for overseas use only according to the new Measurement Law. (The SI unit is provided for use in Japan.) Not 7) :: For thread type: NPT only

ARP20/30/40 Series

Specifications

	Model		ARP20(K)	ARP30(K)	ARP40(K)				
Port size			1/8, 1/4	1/4, 3/8	1/4, 3/8, 1/2				
Fluid				Air	-				
Proof pressure				1.2 MPa					
Max. operating	g pressure			0.7 MPa					
Set	For 0.4 MPa setting	Ex.) ARP30-02BG		0.005 to 0.4 MPa					
pressure For 0.2 MPa setting		Ex.) ARP30-02BG-1		0.005 to 0.2 MPa					
range Note 1)	For 0.6 MPa setting	Ex.) ARP30-02BG-3	0.008 to 0.6 MPa						
Sensitivity				Within 0.2% F.S.					
Repeatability ¹	Note 2)			Within ±1% F.S. (or ±3 kPa)					
	For 0.4 MPa setting	Ex.) ARP30-02BG	1 L/min (ANR) or less (at P2 = 0.4 MPa)						
Air consumption	For 0.2 MPa setting	Ex.) ARP30-02BG-1	0.6 L/	min (ANR) or less (at P2 = 0.	2 MPa)				
	For 0.6 MPa setting	Ex.) ARP30-02BG-3	1.4 L/	0.008 to 0.6 MPa Within 0.2% F.S. Within ±1% F.S. (or ±3 kPa	6 MPa)				
Pressure port	size Note 3)		1/8	1/8	1/4				
Ambient and			-5 to 60°C (No freezing)						
fluid temperature	With digital pressure switch	Ex.) ARP30-02BE1	-5 to 50°C (No freezing)						
Construction			Bleed type						
Weight (kg) Not	e 4)		0.2	0.3	0.5				

Note 1) When a product with backflow function (ARP20K to 40K) is chosen, set the inlet pressure 0.05 MPa or higher than the set pressure.

Note 2) For the type set to 0.2 MPa only, repeatability will be within ±3 kPa. Note 3) Port thread is not provided for products with square embedded-type pressure gauges.

Note 4) Weight shown is for product without any options.

Optional Parts

		Model	ARP20(K)	ARP30(K)	ARP40(K)		
Bracket as	sembly Note 1)		ARP20P-270AS	ARP20P-270AS ARP30P-270AS ARP40P-270A			
Set nut			AR23P-260S AR33P-260S AR43P-260S				
0.4 MPa		Round type Note 2)	G36-4	4-⊡01	G46-4-□02		
	0.4 WFa	Square embedded type Note 3)	GC3-4AS [G	e cover only)]			
0.2 MPa	0.0 MDo	Round type Note 2)	G36-2	G46-2-□02			
	0.2 IVIFa	Square embedded type Note 3)	GC3-2AS [GC3P-010AS (Pressure gauge cover only)]				
Pressure	0.7 MPa	Round type Note 2)	G36-7-□01		G46-7-□02		
gauge	0.7 IVIFa	Square embedded type Note 3)	GC3-7AS [G	e cover only)]			
		NPN output / Wiring bottom entry	ISE35-N-25-	-MLA [ISE35-N-25-M (Switch	n body only)]		
	Note 4)	NPN output / Wiring top entry	ISE35-R-25-MLA [ISE35-R-25-M (Switch body only)]				
	Digital type	PNP output / Wiring bottom entry	ISE35-N-65-	n body only)]			
		PNP output / Wiring top entry	ISE35-R-65-MLA [ISE35-R-65-M (Switch body only)				

Note 1) Assembly includes a bracket and set nuts.


Note 2) 🗆 in part numbers for a round-type pressure gauge indicates a type of connection thread. No indication is necessary for R; however, indicate N for NPT. The G thread is unavailable. If it is required, select the R thread type (Nii) instead. Please contact SMC regarding the connection thread NPT and pressure gauge supply for psi unit specifications.

Note 3) Includes one O-ring and 2 mounting screws. []: Pressure gauge cover only.

Note 4) Lead wire with connector (2 m), adapter, lock pin, O-ring (1 pc.), and mounting screws (2 pcs.) are included. []: Switch body only. For how to order the digital pressure switch, refer to page 767.

Direct Operated Precision Regulator/Modular Type **ARP20/30/40** Series


Conditions:

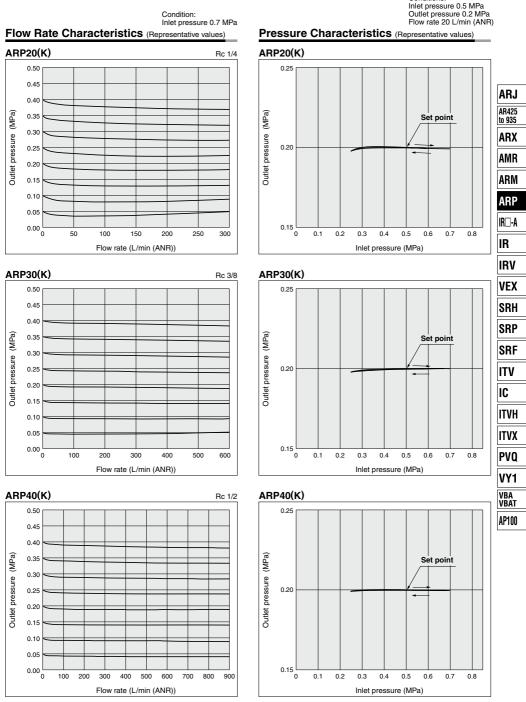


ARP20/30/40 Series


Construction

ARP20(K)/30(K)/40(K)

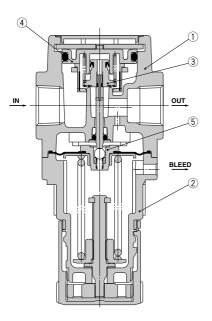

ARP20K/30K/40K (With backflow function)

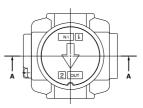

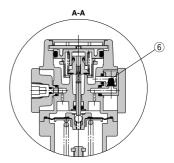

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	External color: White
2	Bonnet	Polyacetal	External color: White

Replacement Parts

No.	Description	Material		Part no.					
INO.	No. Description	Material	ARP20(K)	ARP30(K)	ARP40(K)				
3	Valve assembly	Brass, HNBR, NBR	ARP20P-330AS	ARP30P-330AS	ARP40P-330AS				
4	Valve guide assembly	Polyacetal, NBR	ARP20P-050AS	ARP30P-050AS	ARP40P-050AS				
5	Diaphragm assembly	HNBR, Stainless steel, Brass	ARP20P-151AS	ARP30P-151AS	ARP40P-151AS				
6 Note)	Check valve assembly	_	AR20KP-020AS						


Note) Check valve assembly is the replacement part for a regulator with backflow function (ARP20K to 40K). Assembly of check valve body assembly, check valve cover and 2 screws

Direct Operated Precision Regulator/Modular Type ARP20/30/40 Series

Working Principle (Regulator with Backflow Function)

ARP20K/30K/40K

IN

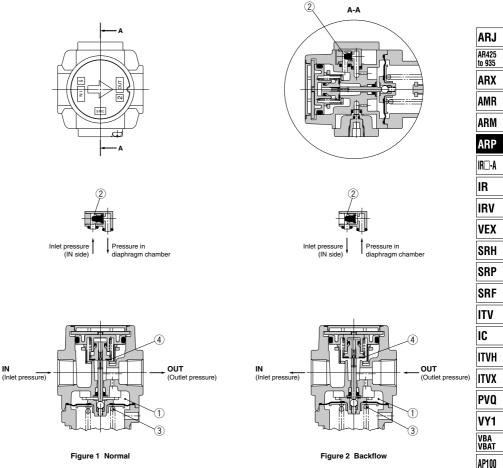


When the inlet pressure is higher than the set pressure, the check valve (2) closes and operates as a normal regulator (Figure 1). When the inlet pressure is shut off and released, the check valve (2) opens and the pressure in the diaphragm chamber (1) is released to the inlet side (Figure 2).

This lowers the pressure in the diaphragm chamber (1) and the force generated by the pressure regulator spring (3) pushes down the diaphragm. Valve ④ opens through the stem, and the outlet pressure is released to the inlet side (Figure 2).

ARP20/30/40 Series

Dimensions

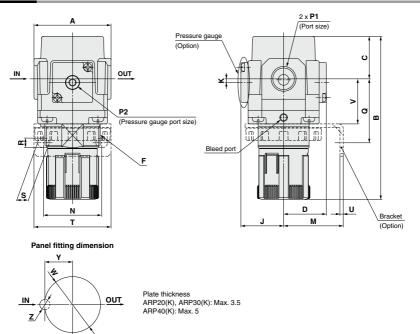

Pressure Gauge Option

Option	Square embedded type	Digital pressure switch	Digital pressure switch	Round type
	pressure gauge	(Electrical entry: Wiring bottom entry)	(Electrical entry: Wiring top entry)	pressure gauge
Dimensions	Center of piping	Center of piping	Center of piping	Center of piping

Model				Standa	rd specif	ications			
woder	P1	P2	Α	B Note 1)	С	D	F	J	к
ARP20(K)	1/8, 1/4	1/8	40	98	27	28.5	M28 x 1	28.5	2 Note 2)
ARP30(K)	1/4, 3/8	1/8	53	117	29	29.5	M38 x 1.5	29.5	2.5
ARP40(K)	1/4, 3/8, 1/2	1/4	70	148	41	34	M42 x 1.5	34	1


								Option	al specifi	cations							
Model	Square embedded type pressure gauge		Digital pressure switch			Round type ssure gauge Bracket mount dimension				Panel mount							
	н	J	н	J	н	J	М	N	Q	R	S	Т	U	v	w	Y	z
ARP20(K)	□28	29.5	□27.8	40	ø37.5	66	30	34	47	5.4	15.4	55	2.3	28	28.5	14	6
ARP30(K)	□28	30.5	□27.8	41	ø37.5	67	41	40	44	6.5	8	53	2.3	31	38.5	19	7
ARP40(K)	□28	35	□27.8	45	ø42.5	74	50	54	54	8.5	10.5	70	2.3	35.5	42.5	21	7

Note 1) The total length of B dimension is the length when the filter regulator knob is unlocked. Note 2) For ARP20(K) only, the position of the pressure gauge is above the center of the piping.



Options Digital Pressure Switch

Refer to Best Pneumatics No. 8 for Pressure Switch Precautions, and the Operation Manual on SMC's website for Specific Product Precautions.

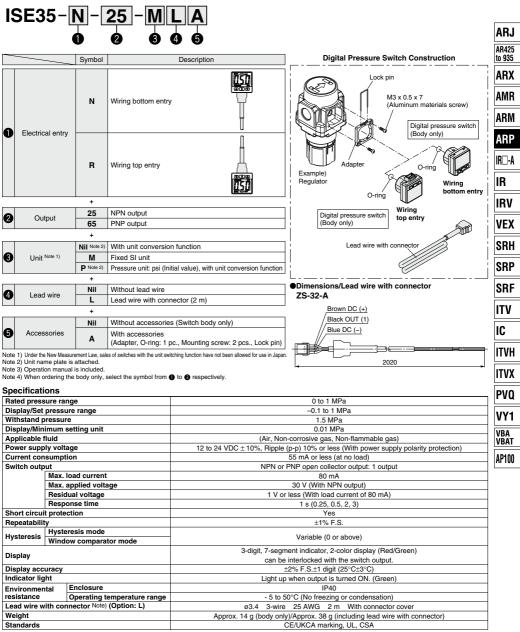

Note) Refer to the Operation Manual in SMC's website (http://www.smcworld.com) for wiring.



ARP20/30/40 Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Precautions on every series.

Design

MWarning

- Be sure to install a safety device to prevent damage or malfunction of the outlet side components when the output pressure exceeds the set pressure value.
- Please consult with SMC if the intended application calls for absolutely zero leakage due to special atmospheric requirements, or if the use of a fluid other than air is required.

≜Caution

- 1. Select a model that is suitable for the desired cleanliness by referring to the SMC's Best Pneumatics catalog.
- 2. Components cannot be used for applications that are outside the range of specifications.

Please consult with SMC when you anticipate using the component outside the range of its specifications (such as temperature and pressure).

 Even when the product is used in the specified range, it may chatter depending on the operating conditions. Please contact SMC for the details of this chattering.

Selection

MWarning

- 1. The mineral grease used on internal sliding parts and seals may run down to outlet side components. Please consult with SMC if this is not desirable.
- 2. Residual pressure release (outlet pressure release) is not complete by releasing the inlet pressure. To release residual pressure, select a model with a backflow function. Using a model without a backflow function makes for inconsistent residual pressure release (i.e., residual pressure may or may not be released) depending upon the operating conditions.
- 3. Please contact SMC if air will not be consumed in the system for a long period of time, or if the outlet side will be used with a sealed circuit and a balanced circuit, as this may cause the set pressure of the outlet side to fluctuate.
- 4. Set the regulating pressure range for the outlet pressure of the regulator in a range that is 90% or less of the inlet pressure.

If set to above 90%, the outlet pressure will be easily affected by fluctuations in the flow rate and inlet pressure, and become unstable.

 A safety margin is calculated into the maximum regulating pressure range appearing in the catalog's specification table.

The outlet pressure may exceed the set pressure.

6. Please contact SMC when a circuit requires the use of a regulator having relief sensitivity with high precision and setting accuracy.

▲Caution

 When operating at an inlet pressure lower than the inlet pressure used in the flow rate characteristics graph, the pressure drop on the outlet side may be greater. Therefore, be sure to conduct testing using the actual equipment. Mounting

≜Caution

- To avoid reversed connections of the air inlet/outlet, make connections after confirming the "IN/OUT" mark or arrows that indicate the direction of air flow. Reversed connections can cause malfunction.
- Leave a space of 100 mm or more for maintenance on the valve guide side (opposite side from the knob).
- 3. When the product is installed between a solenoid valve and an actuator, select a backflow function type.

Adjustment

A Warning

Set the regulator while verifying the displayed values of the inlet and outlet pressure gauges.

Turning the knob excessively can cause damage to the internal parts.

Do not use a tool on the pressure regulator knob as this can cause damage. It must be operated manually.

▲Caution

- 1. Be sure to check the inlet pressure before setting the outlet pressure.
- 2. Be sure to unlock the knob before adjusting the pressure and lock it after setting the pressure.

Failure to follow this procedure can cause damage to the knob and the outlet pressure may fluctuate.

- Pull the pressure regulator knob to unlock. (You can visually verify this with the "orange mark" that appears in the gap.)
- Push the pressure regulator knob to lock. When the knob is not easily locked, turn it left and right a little and then push it (when the knob is locked, the "orange mark", i.e., the gap will disappear).



3. To set the pressure using the knob, turn the knob in the direction that increases pressure and lock the knob after the pressure is set.

If this is done in the direction that decreases pressure, the pressure may drop from the original set pressure. Turning the knob clockwise increases the outlet pressure, and turning it counterclockwise reduces the pressure.

4. Do not apply pressure exceeding the range of specifications.

It can damage the pressure gauge.





ARP20/30/40 Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Precautions on every series.

Adjustment

∆Caution

5. The product consumes a small amount of fluid from the bleed port.

The product is designed to have a bleed mechanism for highly accurate pressure adjustment, and consumes a small amount of fluid from the bleed port. This should not be considered abnormal.

Air Supply

▲Warning

1. Use a mist separator on the inlet side of the product.

If the supplied air contains condensate or dust, the bleed mechanism can malfunction.

2. Do not use a lubricator on the inlet side of the product, as the bleed mechanism can malfunction.

Piping

Warning

1. To screw piping materials into components, tighten with a recommended tightening torque while holding the female thread side.

If the minimum tightening torque is not observed, this can cause a looseness and seal failure. On the other hand, excess tightening torque can cause damage to the threads. Furthermore, tightening without holding the female thread side can cause damage due to the excess force that is applied directly to the piping bracket.

Recommended Tightening Torque

Connection thread	1/8	1/4	3/8	1/2
Torque	7 to 9	12 to 14	22 to 24	28 to 30

- Avoid excessive torsional moment or bending moment other than those caused by the equipment's own weight as this can cause damage.
 Support external piping separately.
- Piping materials without flexibility such as steel tube piping are prone to be affected by excess moment load and vibration from the piping side. Use flexible tubing in between to avoid such an effect.

Maintenance

▲Warning

- When disassembly or installation is required during the maintenance, repair, or replacement of a device, be sure to follow the instructions provided in the operation manual or safety instructions in this catalog.
- When using the regulator with backflow function between a solenoid valve and an actuator, check the pressure gauge periodically.

Sudden pressure fluctuations may shorten the durability of the pressure gauge. A digital pressure gauge is recommended for such situation or as deemed necessary.

A Caution

1. For emergency action in the event of setting failure or leakage from the relief port, refer to "Troubleshooting" in the Operation Manual of the product.

ARJ

Linit: N. m